


Jewelry Store Magnetic Lock Kit System 1200 lbs. Hold Force & Battery Back-Up

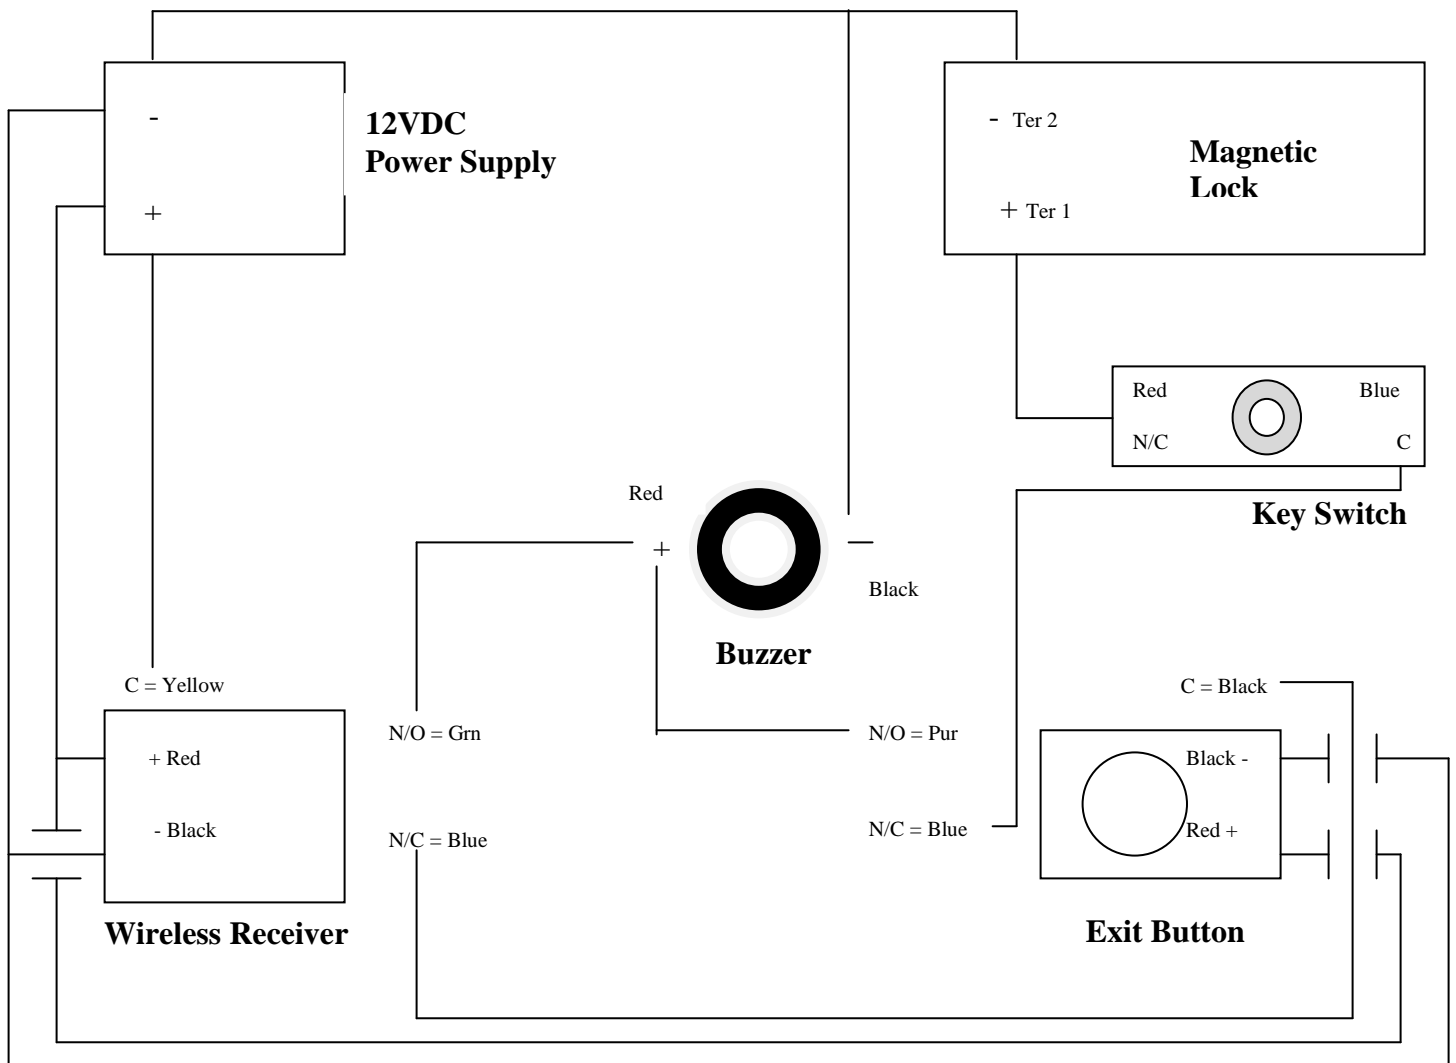

Installation Steps:

- Step 1 – Set for 12 or 24 VDC operation.
- Step 2 – Connect Negative from Power Supply to Terminal 2 on Magnetic Lock & Black wire on Buzzer.
- Step 3 – Connect Positive & Negative from Power Supply to (+), Red wire & (-), Black wire on Wireless Receiver & Exit Button. Installer's note: Some exit buttons do not require this connection.
- Step 4 – Connect Positive from Power Supply to C, Yellow wire on Receiver.
- Step 5 – Connect N/O, Green wire from Wireless Receiver to Red wire on Buzzer.
- Step 6 – Connect N/C, Blue wire from Wireless Receiver to C, Black wire on Exit Button.
- Step 7 – Connect Red wire from Buzzer to N/O, Purple wire on Exit Button.
- Step 8 – Connect N/C, Blue wire from Exit Button to C, Blue wire on Key switch.
- Step 9 – Connect N/C, Red wire from Key switch to Terminal 1 on Magnetic Lock.

*** C = Common; N/C = Normally Closed; N/O = Normally Open *** Exit Button may have contact pins, not wires ***